




# WINE MASTER

———— le temps d'être différent

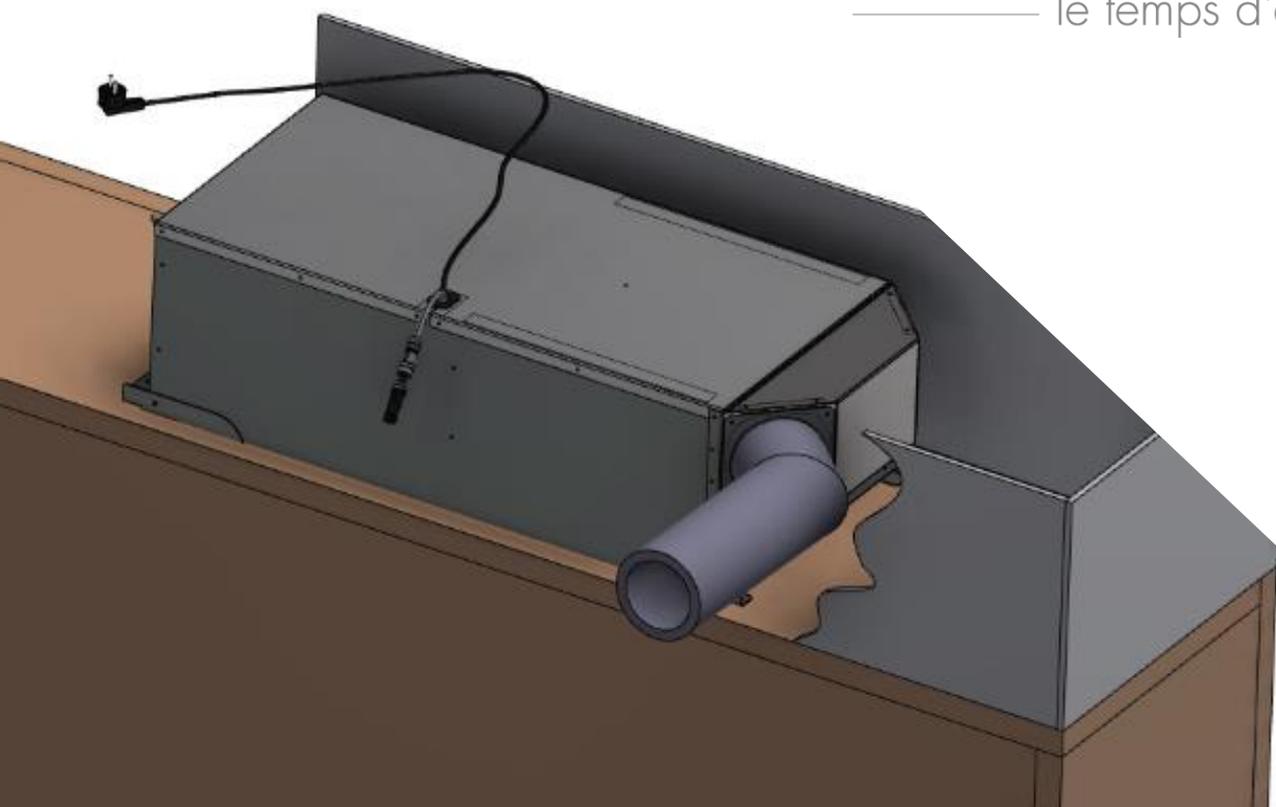


ARM15 KIT D'AIR D125

Comprehensive manual of the kit of air for ARM15

03-2019

# ARM15 Kit air D125mm


## Original system

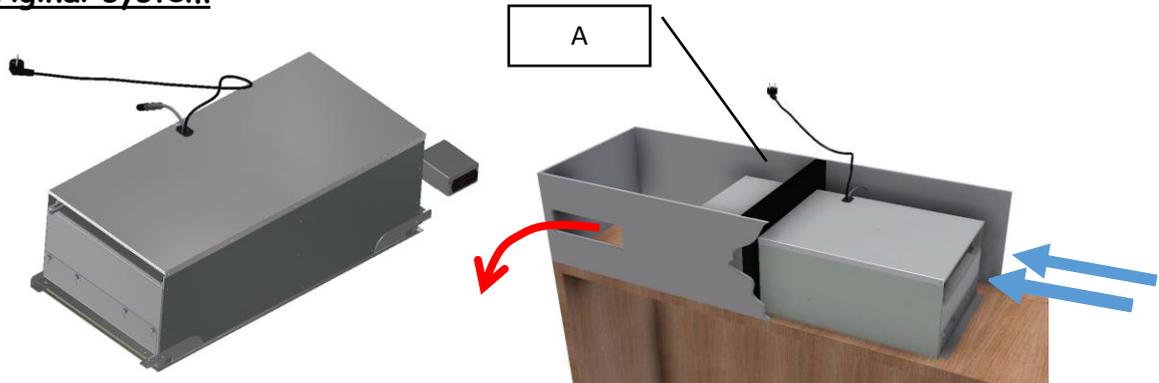

The free cross-section of each grid is 200 cm<sup>2</sup>. Separation "A" is not provided.  
**Be sure to seal this separation.**

## System with Kit air intake D125mm (option)


In order to control the intake, you can add this kit at your ARM.

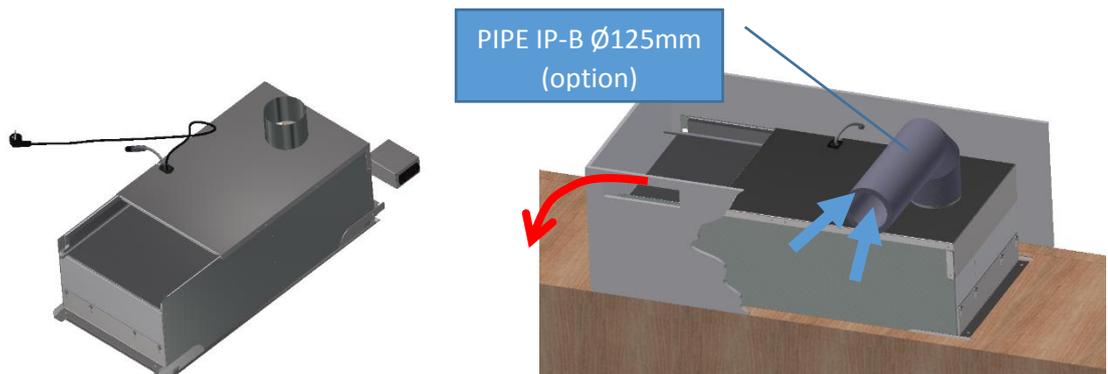

The free cross-section of each grid is 200 cm<sup>2</sup>. With the kit, the separation A is not required. **However, make sure that the distance between air intake and exhaust is sufficient to avoid that the hot air is recycle.**


## System with Kit air outlet or/and intake D125mm (option)

In order to control the intake or/and outlet, you can add this kit at your ARM.

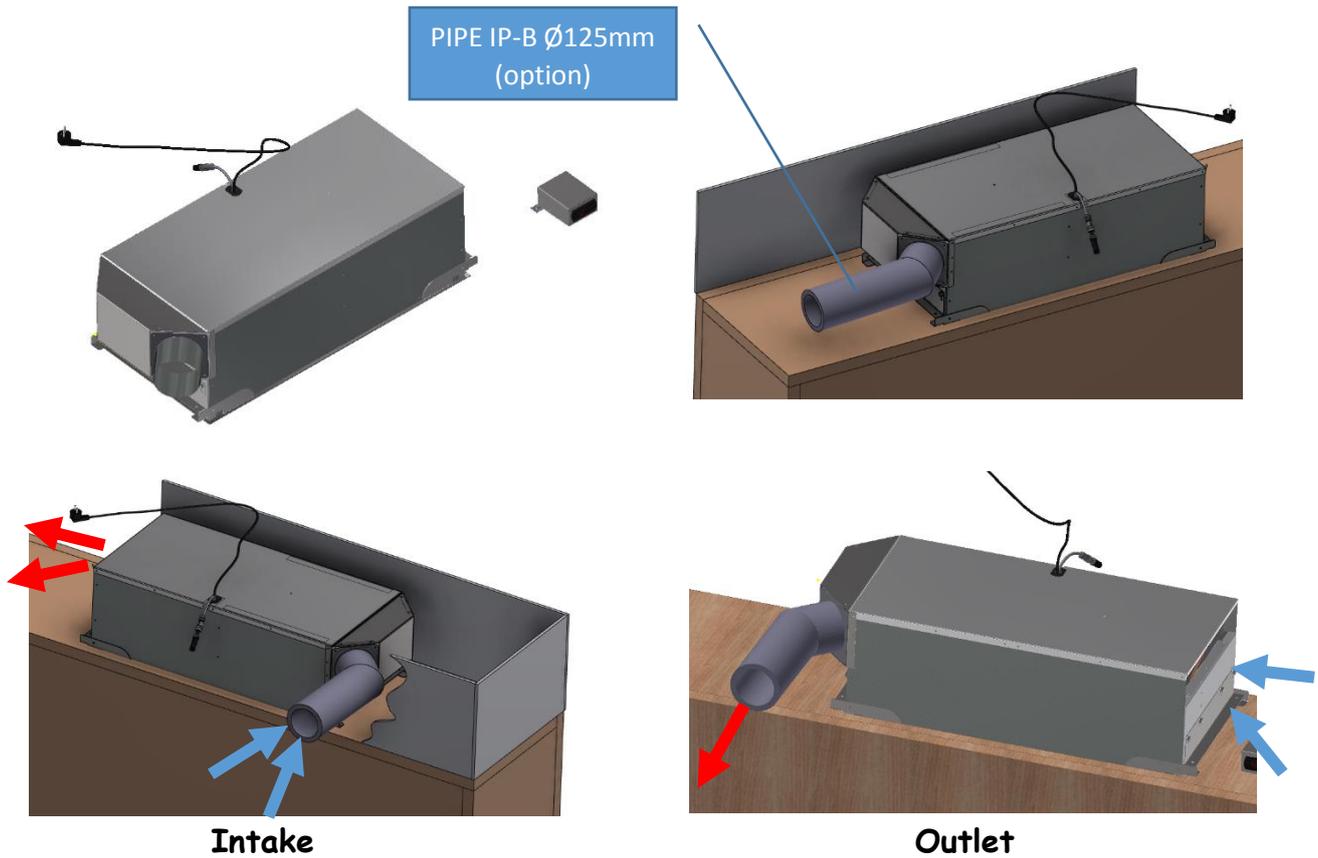


The free cross-section of each grid is 200 cm<sup>2</sup>. With the kit, the separation A is not required. **However, make sure that the distance between air intake and exhaust is sufficient to avoid that the hot air is recycle.**


**Overall dimensions.**

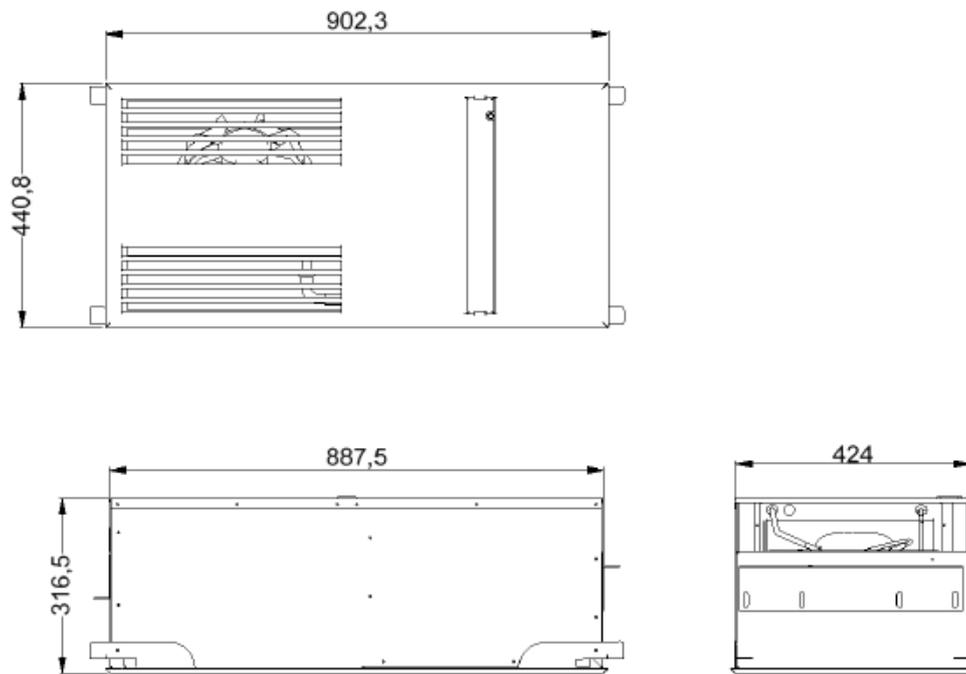

**Kit air intake D125 (option: W1391)**

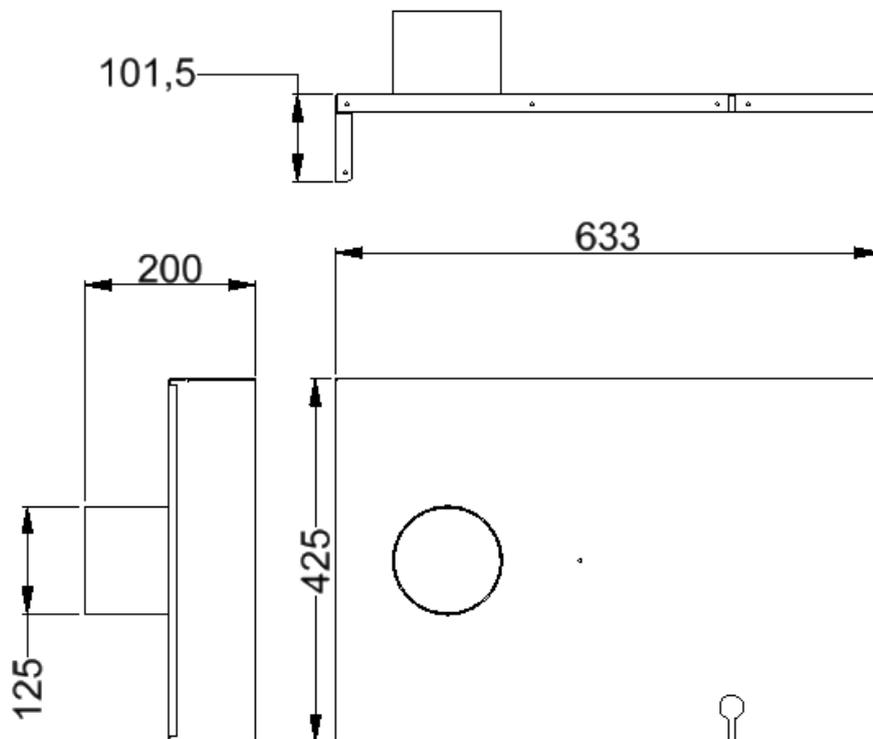

**Kit air D125 (option: W1393)**

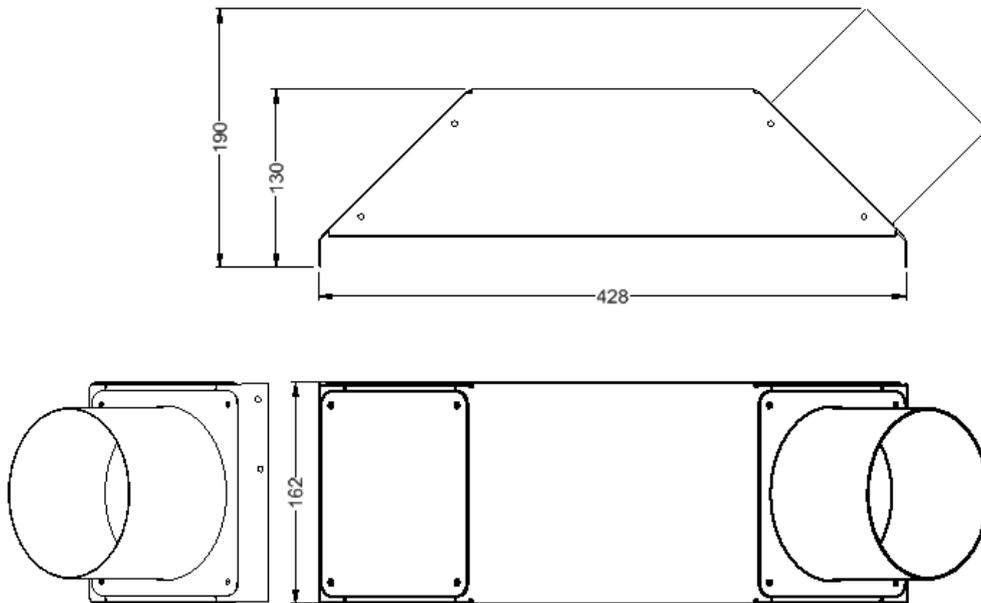

**IP-B D125 (option)**

REF	Description	VIEW
W2550	PIPE D1250 – 2M	
W2551	CLAMP D125	
W2552	ELBOW 90° D125	

W2553	ELBOW 45° D125	
W2554	SLEEVE D125	